

# The Future of Water Testing



WaterLink® **SpinTouch™ DW**



Code 3585

## SETUP

### BEFORE FIRST USE

- **Fully charge battery.**
- **Ensure your Spin Touch has the latest firmware:**
  1. For firmware updates contact technical support at 800-344-3100 ext. 3 or [support@lamotte.com](mailto:support@lamotte.com).

## METER

1. The meter can be powered from an AC outlet, a computer or the internal battery.
2. Use the USB cable and the adapter to plug the meter into an AC outlet.
3. Use the USB cable to connect the meter to the USB port of a computer.

## CHARGE THE BATTERY

1. Use the USB cable and the adapter to plug the meter into an AC outlet to charge the battery.
2. The battery icon on the screen will show the battery status. Charge the battery until the battery indicator is full.

## FIRMWARE UPDATES

After updating firmware it is recommended that the Alignment Procedure on page 13 be performed.



For technical issues, firmware updates, and other support issues contact technical support at 800-344-3100 or [support@lamotte.com](mailto:support@lamotte.com).

## DEVICE CONNECTION

The WaterLink® Spin Touch™ uses **Bluetooth®** low energy technology (BLE) to communicate with bluetooth enabled devices.

## BLUETOOTH CONNECTION


The WaterLink Touch Spin Touch is capable of connecting to a Bluetooth enabled device, such as a phone or tablet, and the Mobile Bluetooth Printer [Code 5-0066]. At this time, although the meter can connect to a phone or tablet, software is not available for transferring data. The Spin Touch is configured to connect to and print, only to the LaMotte Bluetooth Printer [Code 5-0066]. Other Bluetooth printers are not supported.

Whenever the  button appears on the touch screen the Spin Touch is capable of connecting to the Mobile Bluetooth Printer [Code 5-0066]. The  will be highlighted when connected and dim when not connected.


The WaterLink Spin Touch will automatically connect to the nearest Bluetooth enabled printer. It is not necessary to pair the Spin Touch a Bluetooth enabled device. Barriers to wireless signals can reduce the range of wireless devices. The WaterLink Spin Touch will work best if there are no walls between it and the receiving devices.

## FILLING: Single-Use Disks


When the syringe is placed in the water sample, and the plunger is pulled all the way up, the syringe will hold more than enough sample water to adequately fill the disk. The syringe is held vertically and the tip is inserted into the fill hole on the disk. The plunger is pressed slowly and smoothly to fill the disk.

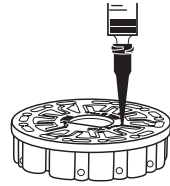


1. Fill the disk using slow, even pressure. The sample water will fill the spaces between the baffles in a counterclockwise order. Each space will fill from the bottom to the top. Sample water should be added until the sample water in the fourth chamber fills **to the top** of the chamber slightly past the embossed fill line. It is OK to fill slightly past the fill line.

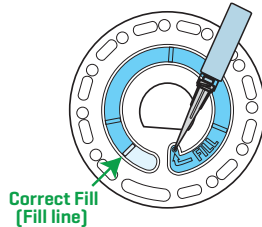


2. Do not overfill the disk. If the disk is overfilled, sample water will flow out of the overflow hole in the center of the disk. The disk is not leaking. Dry the disk and run the test.

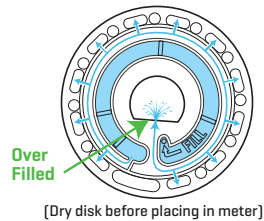

3. Do not under fill the disk. If the disk is under filled, the reagent chambers will not fill entirely and results will be inaccurate.

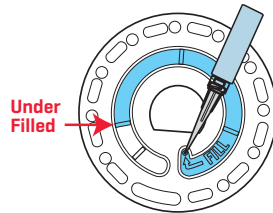

4. Wet disks should be dried thoroughly with a lint free wipe. The disk should be handled by the edges.

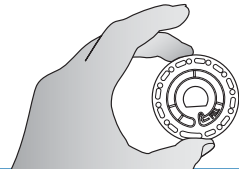

5. Disks should be filled and used within 10 minutes. They cannot be filled ahead of time.

For filling and troubleshooting tips go to: [www.lamotte.com/spin](http://www.lamotte.com/spin)

## GENERAL OPERATING PROCEDURES

### METER

When a filled disk is placed in the chamber and the lid is closed, the meter spins at high speed to distribute the sample to the test wells. Next the meter slows to maximize the pumping action of the stainless steel mixing beads as the reagents mix with the sample water. Each reaction is then read at the proper time and wavelength for that reagent system.



The button located in the lower center of the top of the meter turns the instrument on and off.

The Blue indicator light of the on/off button indicates the status of the instrument.


**Steady blue light** – the blue LED will remain steady to indicate that the meter is on and ready to run a test.

**Blinking blue light** [three blinks/second] – a test is in progress and the disk is spinning. Do not open the lid when the disk is spinning.

Care should be taken when closing the lid. Do not slam the lid. Wiring between the lid and the body of the photometer passes through the hinge. The meter will not run with the lid open.

### TOUCHSCREEN DISPLAY


When the button is pressed to turn the meter on, the Test Screen will be displayed.

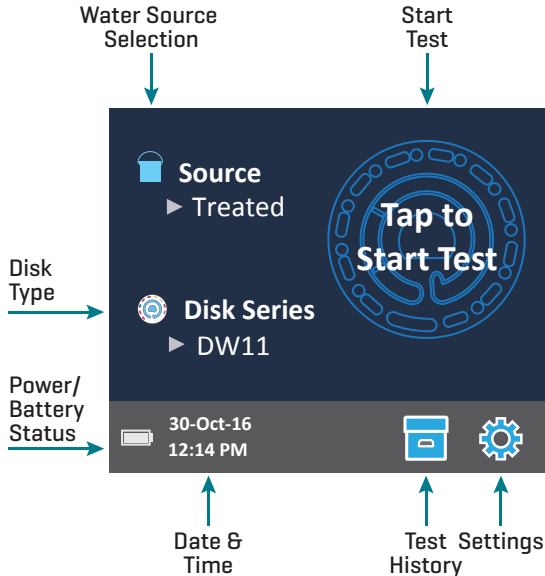








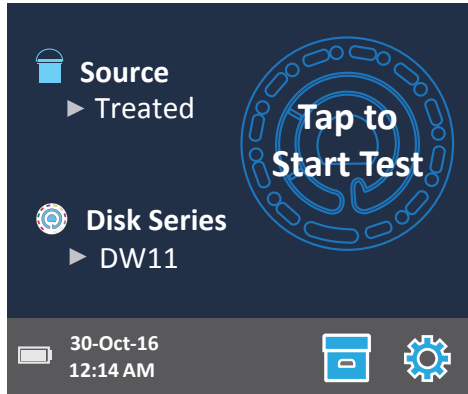



The display screen is touch-activated. To make a selection, tap the icon or word on the screen with a fingertip, fingernail, pencil eraser, or stylus.

- Gently wipe smudges from the screen with the Cloth Wipe (3580-WIPE).
- Do not touch the screen with a sharp object.
- Do not place objects on the screen that will scratch or damage it.
- Avoid touching the screen with wet fingers.


## TESTING



1. Press  and hold until the meter turns on.
2. Tap . Select a Water Source type. Tap  to confirm.
3. Tap . Select a disk series [found on disk packaging]. Tap  to confirm.  
NOTE: Disk Series are limited by Water Source Type selection.
4. Remove a disk from the packaging.
5. Use the syringe [1189] to fill the disk with the water sample.
6. Insert the disk. Cover the disk with the Universal Disk Cover. Close the lid.
7. Tap  to start test. Tap  to stop the test.
8. The results will be displayed.
9. Choose an option.
  - Tap  to return to the Test Screen.
  - Tap the highlighted  to save the test results to the test log if Auto Save is not enabled.
  - Tap the highlighted  to send the results to the enabled Mobile Bluetooth Printer.
10. Press and hold  for 2 seconds to turn the meter off.

## SAVE AND PRINT TEST RESULTS

Test results can be saved and sent to the Mobile Bluetooth Printer [Code 5-0066].

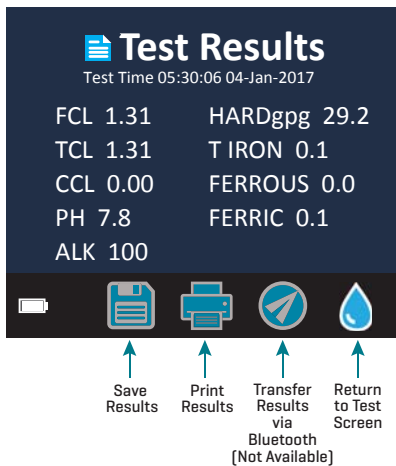


### Save Results

The WaterLink Spin Touch can log test results for 250 water samples in the Test History. The results for the most recent sample will be located at the top of the list. All results can be logged automatically or results for an individual sample can be logged after the sample has been tested.

To turn on automatic logging, tap on the Test Screen. Tap . Select Auto-Save Tests. Tap and to return to the test screen. When Auto Save is selected will not be highlighted on the Test Results screen.

To log results for one sample at a time, Auto-Save Tests must be disabled. If Auto-Save Tests is disabled will be highlighted on the Test Results screen. After the test has been run, tap to save the results for that water sample to the Test History.

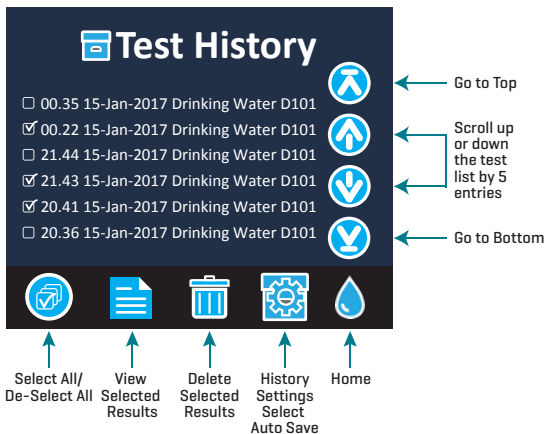





Logged results are viewed in Test History. Controls for viewing and managing single or multiple test records are located on the Test History screen. Tap the checkbox next to a test record to select it, then tap one of the buttons along the bottom to perform an action with the selected records.

## Print Results

The WaterLink Spin Touch can print to the Mobile Bluetooth Printer. The highlighted  will show when the printer function is active.

There are two modes of operation for connecting to the printer – Fast Printer Connect **ON** and Fast Printer Connect **OFF**. The default mode is Fast Printer Connect **ON**. Fast Printer Connect can be turned on or off from the Bluetooth Menu that is located in the Settings Menu.

If Fast Printer Connect is **ON**, the meter will connect immediately to the printer upon recognizing it. The printer will start printing immediately when  is tapped. The  will dim in intensity while the printer is printing.


If Fast Printer Connect is **OFF**, the meter will connect to the printer only after  has been tapped so printing will be delayed a few seconds while the connection to the printer is being established. The  will dim in intensity while the printer is printing.

## SYRINGE



A plastic 3 mL syringe [Code 1189] is used to fill the disks. A precision tip on the syringe fits into the fill hole on the disk. The syringe tip should not be removed from the syringe. Syringes should be cleaned between water samples. Pump air in and out of the syringe a few times to clear the previous sample or rinse the syringe with a small amount of the next water sample before filling it with the next sample.


## REAGENT DISK

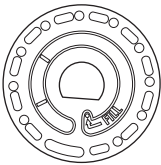

The WaterLink® Spin Touch™ uses a disk reagent system. The dried reagents are packaged in single test amounts in a sealed, polystyrene disk. Stainless steel mixing beads in the reaction chambers mix the sample water and the dried reagents. Tests for all factors in the series are performed at one time. It is not possible to isolate the well for a single factor and perform a test for one test factor only. Single-use disks contain reagents for a single series. Disks should not be filled in the meter chamber.

## DISK HANDLING

The disk should be handled only by the edges. Avoid touching the top or bottom of the disk. The light passes through the non-frosted areas of the disk so these areas must be kept free of smudges and fingerprints. Wet disks should never be placed in the meter. Wet disks should be dried with a lint free cloth before placing them into the chamber.

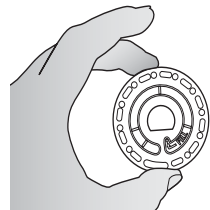


The disk is positioned in the chamber by aligning the D-shaped hole in the center of the disk over the D-shaped hub in the photometer chamber. The disk should be placed gently on the hub. There is no need to firmly press the disk down onto the hub.

## DISK STORAGE


Disks are sensitive to moisture. Avoid opening more packs than are needed. Disks have a limited shelf life and should not be exposed to the humidity in the air more than necessary.

Do not transport the meter with a disk in the chamber.

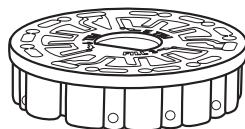

## DISK COVER

The black disk cover is placed over the disk in the photometer chamber to reduce interference from stray light. The disk cover is positioned over the disk by aligning the D-shaped hole in the center of the disk over the D-shaped hub in the photometer chamber. The disk cover should be placed gently on the hub. There is no need to firmly press the disk cover down onto the hub.

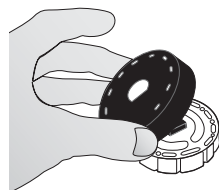

## METER CHECK DISK

The Meter Check Disk serves two purposes:

- When the Meter Check Disk [MCD] is run as an option from the Disk Series menu, the values on the display are compared to the values on the chart on the Meter Check Disk package to determine whether the meter is reporting results in the expected ranges.
- If the Meter Check Disk is inserted in the meter and Rotary Calibration is chosen from the Settings Menu, the alignment of the hub and disk is evaluated. The results are analyzed and reported as Pass or Fail.

For use of the Meter Check Disk see page 13.

## USB CABLE

A USB cable connects the Waterlink® Spin Touch™ to a Windows®-based PC. When used with the AC Power Adapter, it connects the meter to an AC outlet.

**WARNING:** only use the wall adapter that is supplied with the kit. Make no substitutions.

## BATTERY

A fully charged battery will last for approximately 150 tests under average conditions. The battery life will vary based on usage patterns. The meter should be turned off after testing to prolong the battery life. The standard life cycle of a lithium ion battery is 500 cycles. The battery will fully charge in approximately 10-12 hours. The battery is designed to be charged overnight and should be charged indoors only. The battery is rated at 12 V and 8.1 AH capacity. Power the meter from the battery pack or from AC power. The USB cable and AC adapter are used to plug the meter into an AC outlet. **WARNING:** only use the AC adapter supplied with this equipment. Do not substitute.

The battery charge status is indicated by the battery icon on the display. The battery icon will indicate when the battery charge is full, partial, low, empty or charging. The empty











battery icon will flash to indicate that meter should be connected to AC power source. If the meter continues to be used at low battery power without connecting it an AC power source, the meter will go into an auto-shutdown mode. In this mode the meter will be locked until meter is connected to an AC source and the battery is charged to a sufficient voltage. While charging, the charging battery icon will be displayed. The meter should remain plugged in until the battery is fully charged. When the battery is completely charged, the charging icon will change to the full battery icon.





## SETTINGS


Tap  to enter the settings menu. Tap  to return to the test screen at any time.


**Brightness** The brightness level of the display can be adjusted from 00 to 10. Tap  and  to adjust the brightness. Tap  to exit to the Settings menu.


**Date/Time** The Year, Month, Day, Format, Hour, Minute, AM/PM can be set. Tap  or  to adjust the displayed value. Tap  to move to the next value. After the last value has been chosen (minutes for 24 hour format, AM/PM for 12 hour format) tap  to return to the Settings menu. Tap  to exit to the Settings menu at any time.


**Set Language** There are nine language options – English, French, Spanish, German, Dutch, Swedish, Portuguese, Italian, Chinese. Tap selection. Tap  to exit to the Settings menu.


**Calibration** Tap to run an angle calibration to evaluate the alignment of the hub and disk. Tap  to exit to the Settings menu.

**Power Options** There are three power options: Auto Dim Time, Auto Off Time, and Power. Tap the options then tap a selection. Tap selection. Tap  to exit to the Settings menu.

**Bluetooth** There are two Bluetooth options: Bluetooth Enabled and Fast Printer Connect that are used to print test results. Tap  to exit to the Settings menu.

**Market Type** Tap to select the market type. Select Drinking Water. Tap  to exit to the Settings menu.

**Other Settings** Hardness Units allows the selection of units for the hardness test result to be reported as gpg or ppm for the Drinking Water market type. Tap  to return to the Settings menu.

About...lists the Serial Number, Firmware Version, Bluetooth MAC address, Bluetooth Version and Test Count. The Test Count shows the number of complete tests that have been performed over the lifetime of the meter. Tap  to return to the Settings menu.

# TROUBLESHOOTING

## TROUBLESHOOTING GUIDE

Problem	Reason	Solution
Disc not spinning	Lid open, meter not powered on, low battery, disk or disk cover pressed down too tightly on hub  Fast electrical transients may disrupt operation of the Spin Touch meter	Close lid, power on meter, charge the battery or plug meter into a stable power source, remove the disk/disk cover and place back in the meter more gently  Restart the test to resume normal operation
Unexpected Results	Did not use disk cover	Place the disk cover on the disk and close the lid
Unexpected low Chlorine results	High chlorine concentrations will bleach chlorine, and other reagents	Check sample with chlorine test strips [Code 2987]
Trouble connecting to Bluetooth device	Bluetooth not enabled Too many Bluetooth devices near the meter Printer power is ON and Fast Printer Connection is ON	Enable Bluetooth Have only one device near the meter Turn printer power OFF. Or turn Past Printer Connection OFF.
Trouble connecting to computer by USB	Broken connection	Press and hold power button for 1 second.
“Sanitizer” appears on test screen instead of “Source”	Wrong Market Type was chosen	Go to Settings. Change Market Type to Drinking Water
Results not printing	Printer not on The Spin Touch will only print to the Mobile Bluetooth Printer [Code 5-0066]	Turn printer on Connect to Mobile Bluetooth Printer [Code 5-0066]




## TROUBLESHOOTING WITH THE METER CHECK DISK

**Do not attempt to separate the components of the Meter Check Disk [Code 1705]. The Meter Check Disk consists of a disk with a permanently attached cover.**

**Do not fill the Meter Check Disk with water. Water is not used during the meter check procedure.**

### Range Check Procedure



The Meter Check Disk is used to verify the performance of a meter. It is not used to recalibrate the meter. Meters are calibrated at the time of manufacture. The meter is performing satisfactorily if readings using the Meter Check Disk are within the ranges provided on the Meter Check Disk pouch. Range specifications are specific to the disk identified by the serial number on the pouch. The range specifications will vary from disk to disk. The exact readings from a specific disk may vary from meter to meter.

1. Follow the Cleaning procedure on page 17 to clean the light chamber and optic lenses.
2. Tap  select Disk Series.
3. Tap **MCD** to select Meter Check Disk.
4. Tap  to return to the test screen.
5. Remove the Meter Check Disk from the foil pouch. **DO NOT** remove the black cover from the disk.
6. Insert the Meter Check Disk. Close the lid.
7. Tap  to start test.
8. Results will be displayed.
9. Compare the results on the display to the values on the chart shown on the pouch.
10. Replace the Meter Check Disk in the foil pouch for storage.

If the results are not within the range shown on the pouch, contact tech service.

### Alignment Procedure

The Meter Check Disk is inserted in the meter and Calibration is chosen from the Settings Menu to perform an angle calibration which checks the alignment of the hub and disk. The results are analyzed and reported as Pass or Fail. If the measurements pass, the settings will be saved. If the analysis fails, contact tech support.

1. Follow the Cleaning procedure on page 17 to clean the light chamber and optic lenses.
2. Tap  to go to Settings.
3. Tap **Calibration**.
4. Remove the Meter Check Disk from the foil pouch. **DO NOT** remove the black cover from the disk.
5. Insert the Meter Check Disk. Close the lid.
6. Tap **Start** to begin the meter check procedure.
7. If the meter is performing satisfactorily, "Angle Calibration Successful" will be displayed and the settings will be saved.  
If the meter is not performing satisfactorily, "Angle Calibration Unsuccessful. Contact Tech Support." will be displayed.
8. Tap  to return to the Testing Menu and resume testing.

email: [softwaresupport@lamotte.com](mailto:softwaresupport@lamotte.com)

phone: 800-344-3100 option 3 | Mon-Fri 9am-5pm EST

## HELPFUL HINTS

- Do not touch top or bottom of disk. Handle disk by the edge.
- Do not fill disk while in the meter. Fill disk on clean, dry surface.
- Fill the disk on a dark surface to more easily see the sample water.
- The disk should not contain any large air bubbles. Air bubbles will result in erroneous results.
- Always use the disk cover.
- Only the Universal Disk Cover [Code 1719] can be used with the WaterLink® Spin Touch™.
- Empty syringe of old sample before filling with next sample.
- Remove filled disk from meter after testing. Do not travel with filled disks in meter. They may leak.

## RANGES AND SPECIFICATIONS

Test Factor	Range
Alkalinity, Total	0-250 ppm
Chlorine, Free	0.00-15.00 ppm
Chlorine, Total	0.00-15.00 ppm
Combined Chlorine	0.00-15.00 ppm
Hardness, Total	0-70 gpg
Iron, Ferrous	0.0-6.0 ppm
Iron, Ferric	0.0-6.0 ppm
Iron, Total	0.0-6.0 ppm
pH	4.5-9.5

Instrument Type	Centrifugal Fluidics Photometer
Wavelengths [interference filters]	390 nm, 428 nm, 470 nm, 525 nm, 568 nm, 635 nm
Display	Color Capacitive Touchscreen, 3.5 in, 320 x 240 pixel resolution
Wavelength Accuracy	±2 nm
Wavelength Bandwidth	10 typical
Photometric Range	-2 to 2 AU
Photometric Precision	±0.01 AU at 1.0 AU
Photometric Accuracy	±0.01 AU at 1.0 AU
Sample Chamber	Accepts prefilled disk
Light Source	6 LEDs
Detectors	6 silicon photodiodes

Pre-Programmed Tests	Yes, with automatic wavelength selection		
Languages	English, French, Spanish, German, Dutch, Swedish, Portuguese, Italian, Chinese		
Temperature	Operation: 0-50 °C; storage – 40-60 °C		
Operation Humidity Range	0- 90 % RH, non-condensing		
Communication	USB-C, Bluetooth low energy technology [BLE]		
Calibration	Factory set, field calibration via internet connection		
Firmware	Internet updateable [New Test, New Test Calibrations, etc.]		
Software	Android & iOS Apps, DataMate® Web, DataMate®10		
Power Requirements	USB wall adapter, USB computer connection or internal lithium ion rechargeable battery		
Battery Type	Lithium ion		
Minimum Capacity	12 V/2.6 AH		
Charge Life	Approximately 150 tests		
Battery Life	Approximately 500 charges		
Full Charge	10-12 hours		
Water Resistance	Rubber over-molded base, rubber USB Port Plug, gasketed display and hinge.		
Electrical Rating	Rated voltage [5V], Rated power of input current [1.6 A] at USB C		
Auto Off	Yes, default 15 [only with battery power]		
Power Save	Yes, default OFF		
Data Logger	250 test results stored for download to PC or transfer by Bluetooth		
Certifications	EZ-BLE™ PRoC™ Module, CYBLE-022001-00 RF Radio:	FCC [USA]:	FCC ID: WAP2001
		Industry Canada [IC] Certification:	License IC: 7922A-2001
		CE [Europe]:	Complies with Directive 1999/5/EC
		MIC [Japan]:	005-101007
		KC [Korea]:	MSIP-CRM-Cyp-2001
	EMC:	EU: ETSI EN 301489-1 US: FCC PART 15 B CAN ICES-3 [B]/NMB-3[B] AS/NZS: CSPR 22	
	Safety:	EU: EN61010-1:2010 AS/NZS: national differences	

Dimensions	21.6 X 12.4 X 10.4 cm [L X W X H] 8.5 X 4.9 X 4.2 in
Weight	0.79 Kg, 1.74 lb

## ACCESSORIES AND REPLACEMENT PARTS


Description	Code
WaterLink® Spin Touch™ DW Meter	
Water Sample Bottle [30 mL]	0689
Syringe with tips [3]	1189-3
Syringe tips [3]	1189-TIP
Cleaning Tissues	0669
Meter Check Disk [North American]	1705
Meter Check Disk [Europe]	1705-EU
Universal Disk Cover	1719
USB Cable	1712
AC Adapter [North America]	1713
Cloth Wipe	3580-WIPE
Mobile Bluetooth Printer	5-0066
WaterLink® Spin Touch™ DW Manual	3585-MN
WaterLink® Spin Touch™ DW Quick Guide	3585-QG

For available WaterLink® Spin Touch™ DW reagent disks, see page 17.

## DISK DESCRIPTIONS

### Drinking Water Disk (Code 4336-H)

Total Alkalinity	Ferrous Iron
Free Chlorine	Ferric Iron
Total Chlorine	Total Iron
Combined Chlorine	pH
Total Hardness	

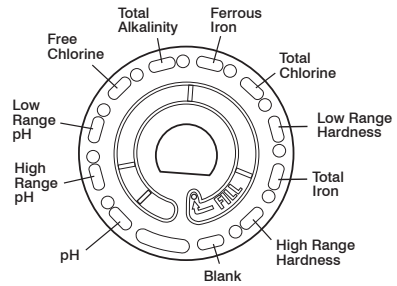

NOTE: Colored reagents may be visible in the disk before adding sample water.

## MAINTENANCE

### CLEANING

The optical system of the WaterLink® Spin Touch™ must be kept clean and dry for optimal performance. Dry the disk with a lint-free wipe before placing it into the chamber to avoid introducing moisture. For best results, store the instrument in an area that is dry and free from aggressive chemical vapors. Clean the exterior housing with a damp, lint-free cloth. Do not allow water to enter the light chamber or any other parts of the meter. To clean the light chamber and optic lenses, point a can of compressed air into the light chamber and the lid and blow the pressurized air into the light chamber and lid. Focus the pressurized air around the LEDs which are the small round lenses positioned at 2:00, 4:00, 6:00, 8:00, 10:00 and 12:00 in the lid. The photodiodes are located on the bottom of the chamber around the hub. This area must be kept clean and dry. Use a cotton swab dampened with Windex® window cleaner to gently swab the LED and photodiode lenses. Do not use alcohol; it will leave a thin residue over the optics when dry.

Remove smudges due to routine use from the touchscreen with the Cloth Wipe (Code 3580-WIPE). Use a cloth dampened with alcohol for more thorough cleaning when necessary. Do not use Windex® window cleaner, or similar cleaners, on the touchscreen.

### REPAIRS

Should it be necessary to return the meter for repair or servicing, pack the meter carefully in a suitable container with adequate packing material. A return authorization number must be obtained from LaMotte Company by calling 800- 344-3100, ext. 3 (US only) or 410-778-3100, ext. 3, faxing 410-778-6394, or emailing [softwaresupport@lamotte.com](mailto:softwaresupport@lamotte.com). Often a problem can be resolved over the phone or by email. If a return of the meter is necessary, attach a letter with the return authorization number, meter serial number, a brief description of problem and contact information including phone and FAX numbers to the shipping carton. This information will enable the service department to make the required repairs more efficiently.

### METER DISPOSAL

Waste Electrical and Electronic Equipment (WEEE)

Natural resources were used in the production of this equipment. This equipment may contain materials that are hazardous to health and the environment. To avoid harm to



the environment and natural resources, the use of appropriate take-back systems is recommended. The crossed out wheeled symbol on the meter encourages the use of these systems when disposing of this equipment.



Take-back systems will allow the materials to be reused or recycled in a way that will not harm the environment. For more information on approved collection, reuse, and recycling systems contact local or regional waste administration or recycling services. Do not incinerate the equipment.

## **DISK DISPOSAL**

The disks cannot be reused. Over time, the water in reacted disks will evaporate. Disks can be recycled. Warning: Recyclers should check with the local authorities. Some states may require that no chemical residue remains on the plastic or may not be able to accept plastic waste with stainless steel mixing beads. Used disks may be returned, at the customer's expense, to LaMotte for recycling.

## **GENERAL INFORMATION**

### **PACKAGING AND RETURNS**

Experienced packaging personnel at LaMotte Company assure adequate protection against normal hazards encountered in transportation of shipments. After the product leaves the manufacturer, all responsibility for its safe delivery is assured by the transportation company. Damage claims must be filed immediately with the transportation company to receive compensation for damaged goods. Should it be necessary to return the instrument for repair or servicing, pack the instrument carefully in a suitable container with adequate packing material. A return authorization number must be obtained from LaMotte Company by calling 1-800-344-3100 or 1-410-778-3100, ext. 3 or emailing [tech@lamotte.com](mailto:tech@lamotte.com). Attach a letter with the authorization number to the shipping carton which describes the kind of trouble experienced. This valuable information will enable the service department to make the required repairs more efficiently.

### **GENERAL PRECAUTIONS**

Read the instruction manual before attempting to set up or use the instrument. Failure to do so could result in personal injury or damage to the meter. The WaterLink® Spin Touch™ should not be stored or used in a damp or excessively corrosive environment. Care should be taken to prevent water or reagents from entering the photometer chamber. Wet disks should never be put into the photometer chamber.

### **SAFETY PRECAUTIONS**

Read the safety precautions on the labels of all reagent containers and packaging prior to use. Safety Data Sheets (SDS) can be found at [www.lamotte.com](http://www.lamotte.com). Additional emergency information for all LaMotte reagents is available 24 hours a day from the National Poison Control Center at 1-800-222-1222 or by contacting the 24 hour emergency line for ChemTel at 1-800-255-3924 [USA, Canada, Puerto Rico]. For locations outside of the North American continent call 813-248-0585 collect.

Ensure that the protection provided by this equipment is not impaired. Do not install or use this equipment in a manner that is not indicated in this manual.

## LIMITS OF LIABILITY

Under no circumstances shall LaMotte Company be liable for loss of life, property, profits, or other damages incurred through the use or misuse of its products.

## CE MARK

The WaterLink® Spin Touch™ meter has been independently tested and has earned the European CE Mark of compliance for electromagnetic compatibility and safety. To view certificates, go to the LaMotte website and [www.lamotte.com](http://www.lamotte.com).

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions [1] This device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## WARRANTY

LaMotte Company warrants this instrument to be free of defects in parts and workmanship for 2 years from the date of shipment. If it should become necessary to return the instrument for service during or beyond the warranty period, contact our Technical Service Department at 1-800-344-3100 or 1-410-778-3100, ext. 3 or [softwaresupport@lamotte.com](mailto:softwaresupport@lamotte.com) for a return authorization number or visit [www.lamotte.com](http://www.lamotte.com) for troubleshooting help. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. LaMotte Company specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. LaMotte Company's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

To register your meter with the LaMotte Service Department, go to [www.lamotte.com](http://www.lamotte.com) and choose SUPPORT on the top navigation bar.

Serial Number \_\_\_\_\_

Compatible with iPhone 6 Plus, iPhone 6, iPhone 5s, iPhone 5c, iPhone 5, iPad Air 2, iPad Air, iPad mini 3, iPad mini 2, iPad mini, and iPad (4th generation).

Compatible with Android devices.

WaterLink® and DataMate® are registered trademarks of LaMotte Company.  
Disk Patent No. 8,734,734 FCI Patent No. 8,987,000 TCI Patent No. 8,993,337



Water Testing Leader Since 1919

**LaMotte Company**

PO Box 329  
Chestertown, MD 21620 USA  
410-778-3100

[www.waterlinkspintouch.com](http://www.waterlinkspintouch.com)